



Barral Antipánico

SERIES 1300

DISTRIBUIDOR EXCLUSIVO



La Aldaba
SRL


FABRICANTES, DISTRIBUIDORES E IMPORTADORES DE MARCAS LÍDERES

**ACCESORIOS E INSUMOS PARA
CARPINTERÍA DE ALUMINIO Y VIDRIO**

SOMOS LA OPCIÓN
laaldabaaccesorios.com.ar




AV. Francia 3960 / Rosario, Santa Fe, Argentina / +54 (0341) 431-9089 / ventas@laaldabaaccesorios.com.ar

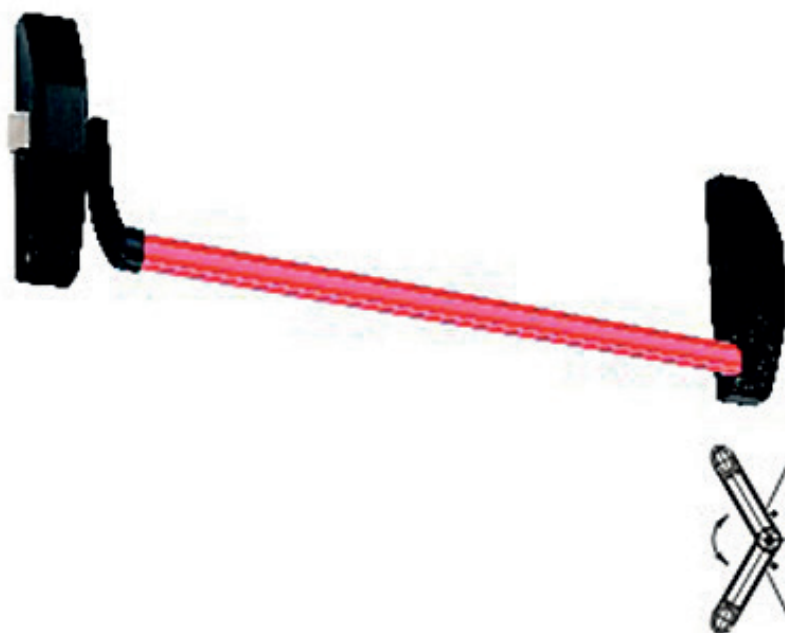

PROIN-1310 Rim type

Feature:



1. One point lock
2. Material: Zinc Alloy
3. No Handed
4. Horizontal bar standard : 900MM
5. Color: Painted optional
6. Door width: Max for 1020MM

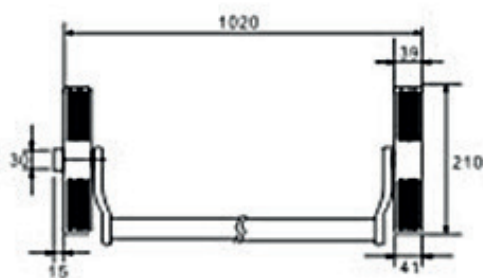

PROIN-1320 Vertical type

Feature:


1. Two points lock
2. Material: Zinc Alloy
3. No Handed
4. Horizontal bar standard : 900MM
5. Color: Painted optional
6. Door width: Max for 1020MM
7. Door height: Max for 2100MM

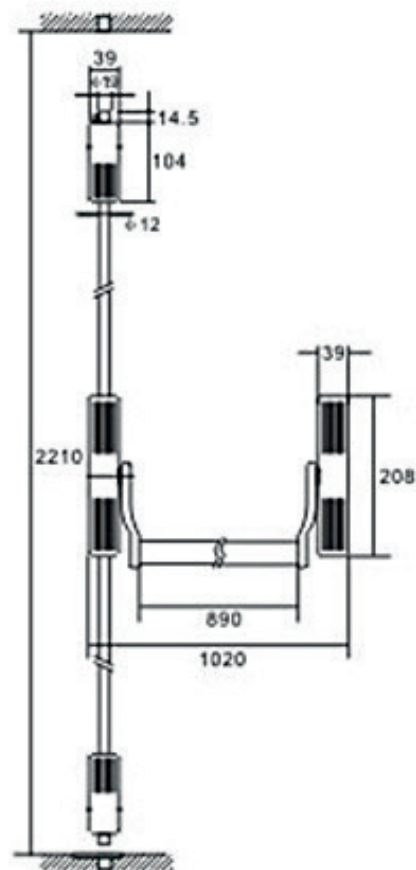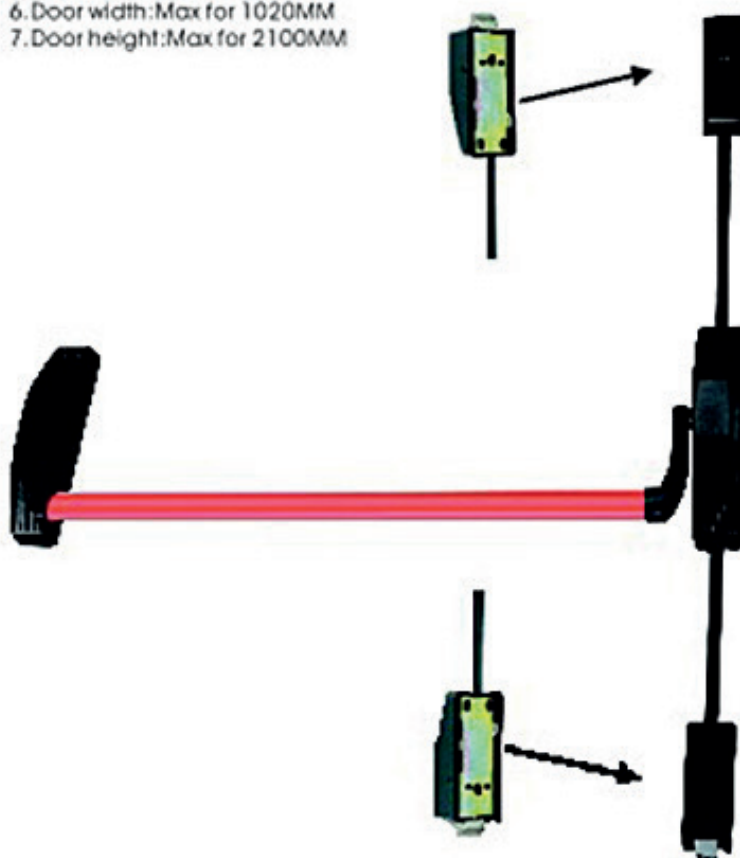

PROIN-1330 Vertical type

Feature:


1. Three point lock
2. Material: Zinc Alloy
3. No Handed
4. Horizontal bar standard :900MM
5. Color: Painted optional
6. Door width: Max for 1020MM

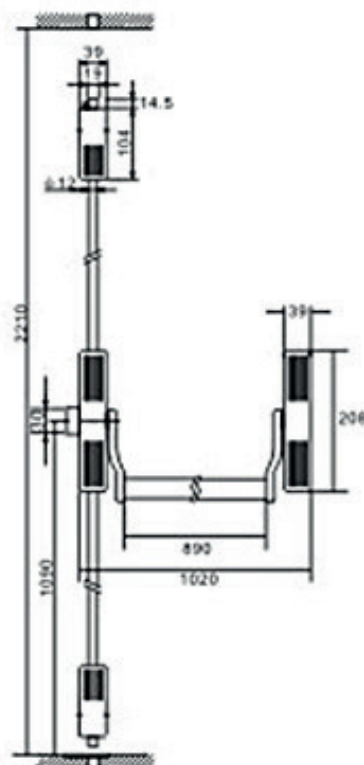


PROIN-1300 Mortise type

Feature:

1. Work with mortise lock body
2. Material: Zinc Alloy
3. No Handed
4. Horizontal bar standard : 900MM
5. Color: Painted optional
6. Door width: Max for 1020MM
7. Door height: Max for 2100MM

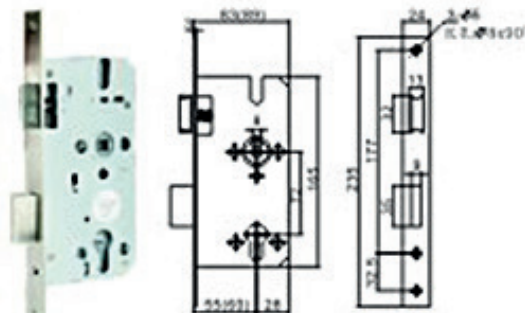


Cerradura de ajuste exterior para PROIN-1300

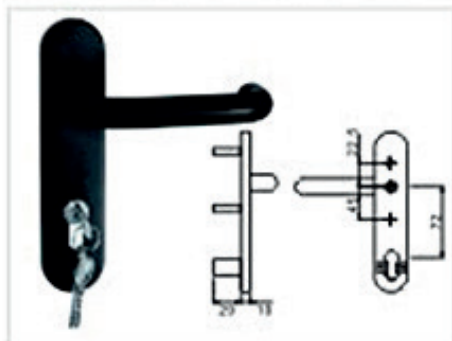

Model:DK-015

Material: Metal painted
3 brass keys and brass cylinder
No handed
Door width: Max for 80MM

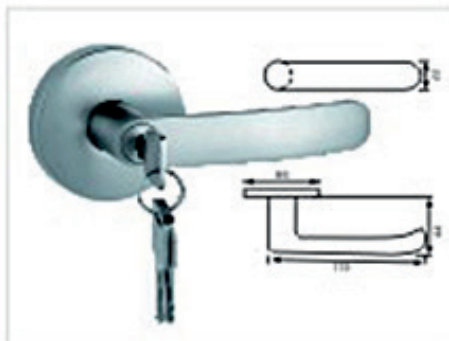

Model:DK-016S

Material: Zinc Alloy
3 brass keys
No handed
Door width: 45-50MM





Model:DK-026S




Material: Zinc Alloy
3 brass computer keys and brass cylinder
No handed
Door width: 45-50MM

MODEL.1310-1320-1330

DOOR - PORTE - ANTA - PUERTA

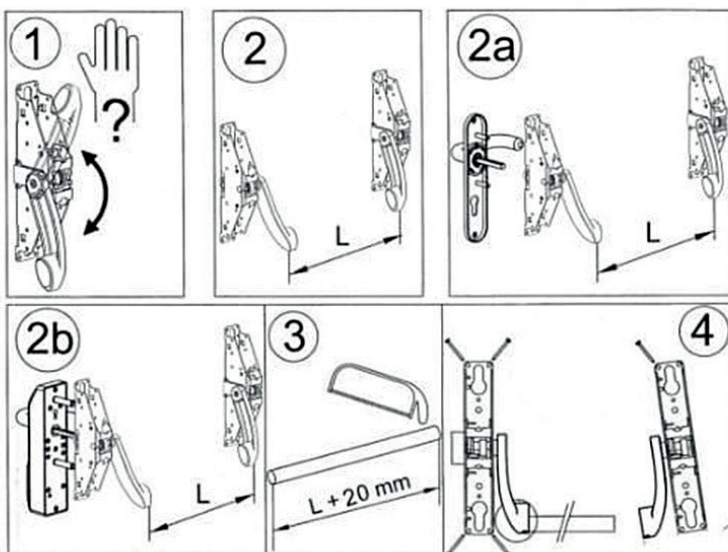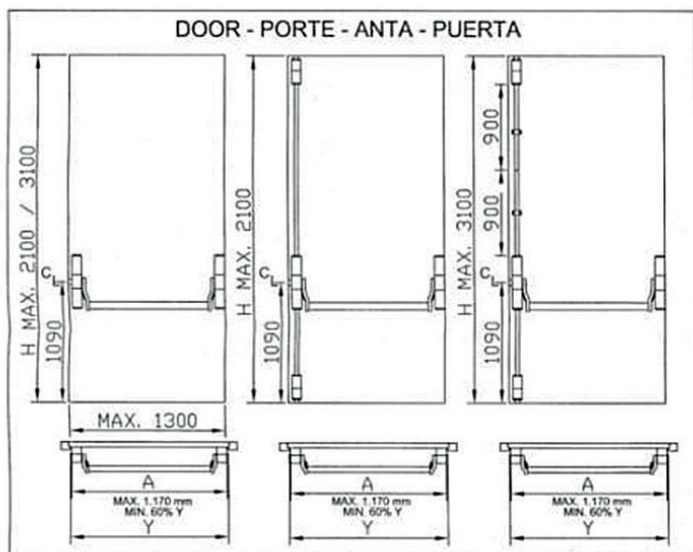

	310	320
M4 x 8.5 T1	4	10
Ø 4.2 x 16 T2	11	20
Ø 4.2 x 38 T3	-	4
M8 x 50 T4	2	2

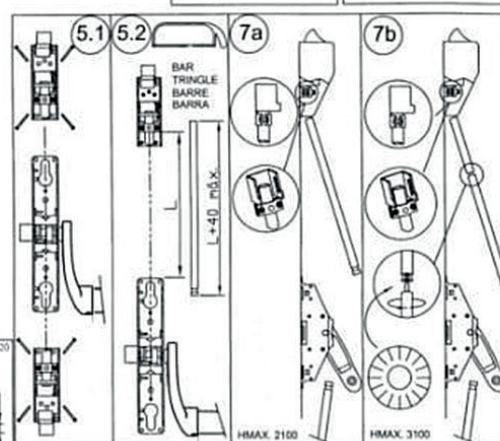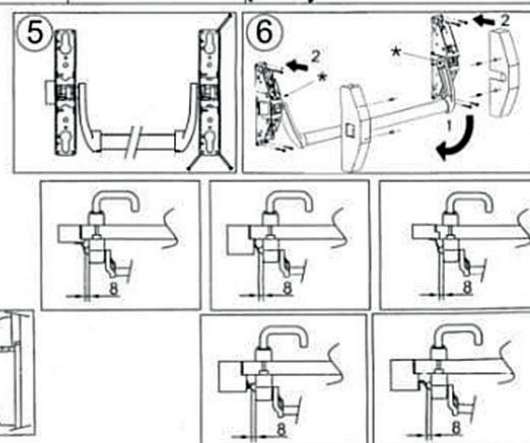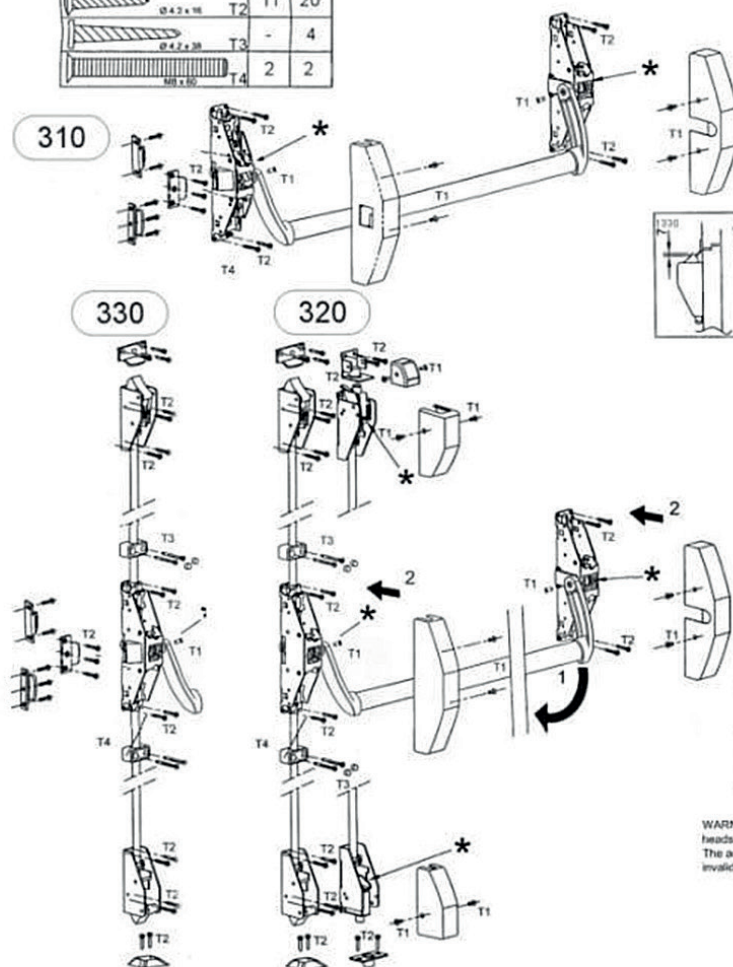


WARNING: Functional inspection. Check periodically (at least once a month) the way of Panic Exit Device (PED) working. Examine that all bolt heads engage correctly with its corresponding keeper in order that PED opens safely (>80%). The accurate working of PED is essential for the safety of people. Any inaccuracy of the recommendations described in this instruction sheet invalidates the company warranty.


* IMPORTANT: in order to guaranty a correct use, it is compulsory to lubricate the driving parts (upper latch, lower latch, central latch, etc.) while assembling, and afterwards every 20.000 cycles and at least once per year.

INSTRUCCIONES PARA INSTALACIÓN ACCESO EXTERIOR - ANTIPANICO


A、 Installation diagram for with mounting plate
A

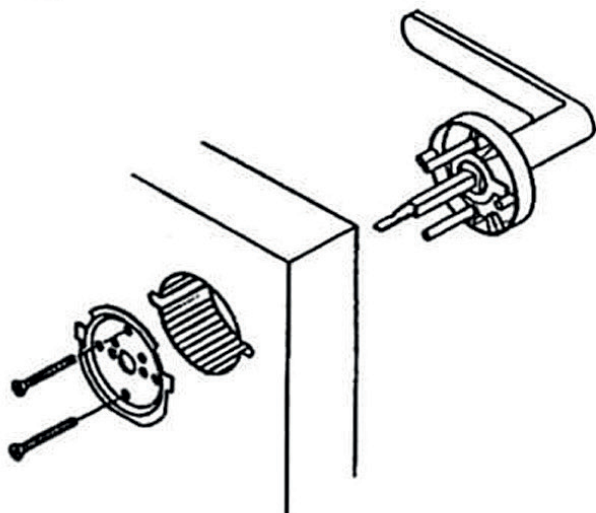


B、 Installation diagram for with mounting plate
B

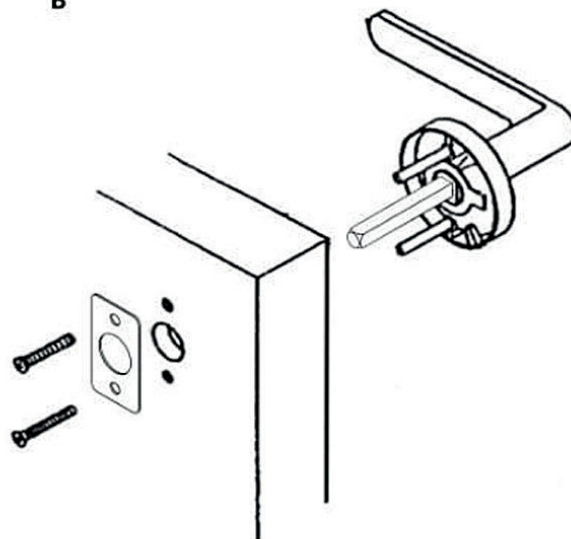


A、 Position of hole for with mounting plate

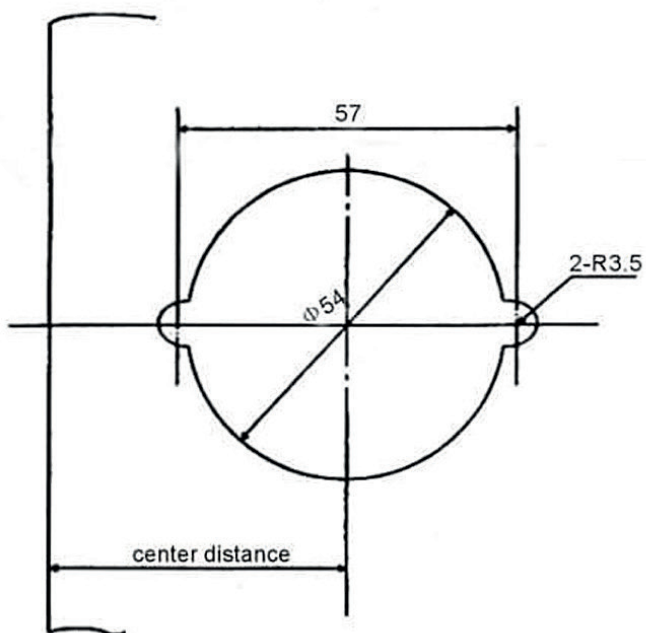


B、 Position of hole for with mounting plate

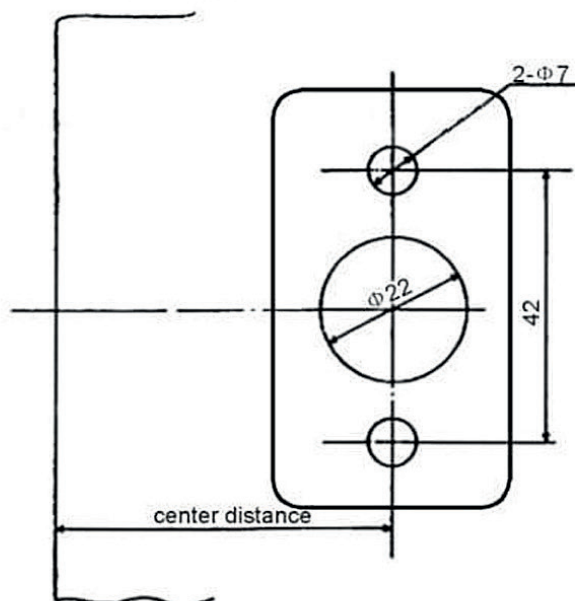


A、 center dimension of single door

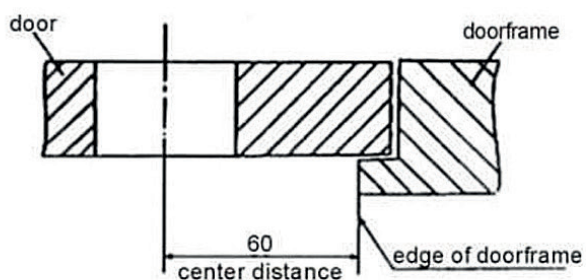

B、 center dimension of dual door

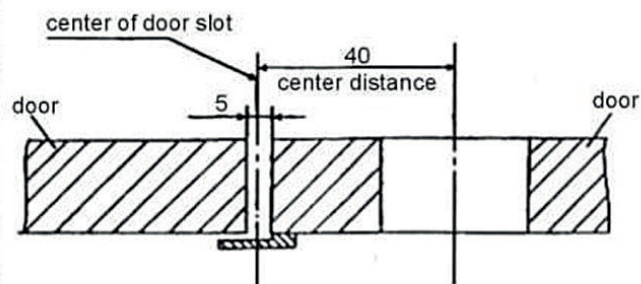

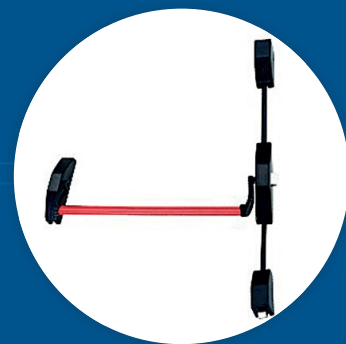

Barral Antipánico

SERIES 1300

DISTRIBUIDOR EXCLUSIVO



La Aldaba[®]
SRL